

MOZZIGUARD CLEANING GUIDE

To ensure you get the most out of your MozziGuard Insect Screens, we recommend regular cleaning to conserve the decorative appearance and to reduce corrosion strain.

If the screens are not cleaned regularly the soiling process can be accelerated and may lead to irreparable surface defects and loss of the decorative appearance.

The mesh acts as a filter for air and can trap dust, dirt, salt, moisture and airborne impurities, resulting in marks and stains. Removing these impurities through regular maintenance is essential.

Cleaning Instructions

- Use warm water and a soft, non-abrasive brush or cloth
- Only use clean water, with slight additives of neutral washing agents (pH 7)
- To remove greasy, oily or sooty substances, make use of a white spirit, free of aromatic compounds or isopropyl alcohol
- Do not use solvents containing ester, ketones, polyhydric alcohol, aromatics, ethylene glycol or halogenated hydrocarbon
- Do not use scratching or abrasive agents
- Do not use strong acids or alkaline detergents
- Do not use detergents of unknown compositions
- Keep the exposure period to detergents to a maximum of one hour - the cleaning process can be repeated after 24 hours
- Rinse with clean cold water immediately after every cleaning
- For fine-textured effects use a fiber-free cloth and if needed a soft, non-surface-damaging brush
- Keep the track of sliding screens clean of dust and dirt

Frequency of cleaning

Environment	Description	Cleaning Intervals
Mild	More than 10km from beachfront or sheltered bay	Every 6 months
Moderate	Within 1km to 10km of beachfront or sheltered bay	Every 2 to 3 months
Marine	Within 500m of beachfront or within 100m to 1km of sheltered bay	Every 2 to 4 weeks
Severe Marine	Within 500m of beachfront or 100m of sheltered bay	Every 1 to 2 weeks

Some installations may require extra maintenance due to local environment conditions